


USER MANUAL

NUPOWER™ 05E05A-C04-S01

S-BAND POWER AMPLIFIER

PART NUMBER:
NW-PA-05E05A-C04-S01

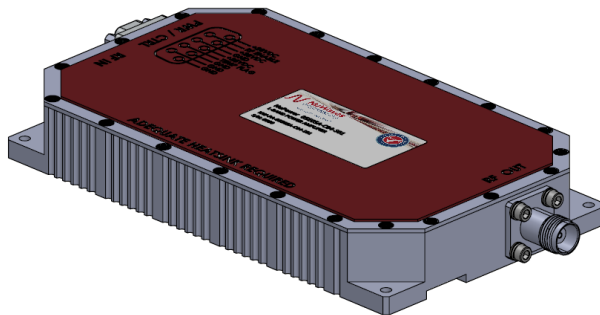

NuWaves RF Solutions
132 Edison Drive
Middletown, Ohio 45044
PH: 513-360-0800
FAX: 513-539-8782
www.nuwaves.com
sales@nuwaves.com

1 NUPOWER™ PRODUCT LINE OVERVIEW

The NuPower family of solid-state RF power amplifier (PA) modules is designed to meet the demanding needs of the Aerospace & Defense, Industrial, and Commercial markets. Based on the latest gallium nitride (GaN) technology, NuPower's power efficiency and miniature form factor make it ideal for size, weight, and power-constrained broadband RF telemetry and tactical communications systems.

1.1 NUPOWER™ PRODUCT LINE HIGHLIGHTS

- High Performance: Unique combination of broadband coverage, miniature form factors, and high efficiency.
- Enclosures: The NuPower family of power amplifiers is housed in a silver nickel plated aluminum enclosure with mounting holes incorporated into the chassis.
- Completely Characterized: The NuPower family of solid state power amplifiers has been completely characterized over temperature, voltage, and frequency. These high-performance modules offer significant value for the OEM user or the Systems Integrator.
- User Friendly: Over-Voltage protection and regulator thermal shutdown provide defenses against user interface issues.
- High Reliability: NuWaves' selection of conservatively rated components provides high reliability. Each NuPower is inspected to IPC-A-610 Class II quality standards. NuWaves' Quality Management System is AS9100:2016 Rev D and ISO 9001:2015 certified.
-
- Applications: Broadband RF Telemetry • RF Communication Systems • Electronic Warfare • Unmanned Aircraft Systems (UAS) • Unmanned Ground Vehicles (UGV) • Unmanned Surface Vehicles (USV) • Software Defined Radios • Test Labs
- Available Options:
 - Fan-cooled heat sink with 28V operated fan
 - Labeled interface cable with banana jack plugs

2 NUPOWER™ 05E05A-C04-S01 OVERVIEW

The NuPower™ 05E05A-C04-S01 is a small, power efficient, connectorized solid state power amplifier that provides 35 Watts (min) of RF power to boost performance of data links and transmitters.

The NuPower 05E05A-C04-S01 accepts a nominal 0 dBm (1 mW) RF input and provides >45 dB of gain from 2293.75 MHz to 2295.75 MHz for continuous wave (CW) and near-constant-envelope waveforms.

Based on the latest gallium nitride (GaN) technology, the NuPower 05E05A-C04-S01's 35% power efficiency at rated power and <10 in³ form factor make it ideal for size, weight, and power-constrained broadband RF telemetry, tactical communication, and electronic warfare systems.

NuPower PAs feature over-voltage protection and can operate over a wide temperature range of -40 °C to +85 °C (baseplate).

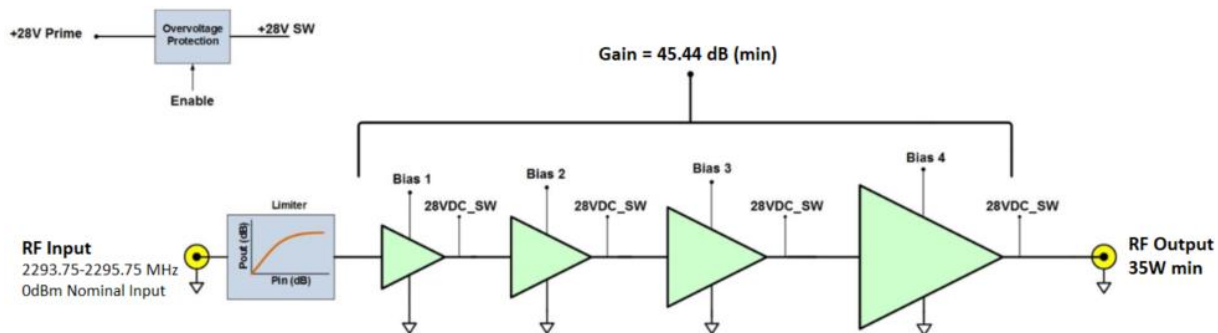


Figure 1: NuPower 05E05A-C04-S01 Functional Diagram

2.1 NUPOWER 05E05A-C04-S01 SPECIFICATIONS

The subsequent tables in this section outline the NuPower 05E05A-C04-S01's performance specifications.

Table 1: NuPower 05E05A-C04-S01 Electrical Specifications

Parameter	Specification
Frequency Range	2293.75 MHz to 2295.75 MHz
RF Output Power	35 Watts (min) 38 Watts (typ)
RF Gain	45.44 dB (min)
Nominal Input Drive Level	0 dBm
Operating Voltage	+27 to +32 VDC
Operating Current	4.0 A @ +28 VDC (typ)
Module Efficiency	34% (typ)
Power Amplifier Enable	RF Enable Grounded

Table 2: NuPower 05E05A-C04-S01 Environmental Specifications

Operating Conditions	Specification
Operating Temperature	-40 to +70 °C (ambient) -40 to +85 °C (baseplate)
Storage Temperature	-55 to +85 °C

2.2 NUPOWER 05E05A-C04-S01 MECHANICAL SPECIFICATIONS

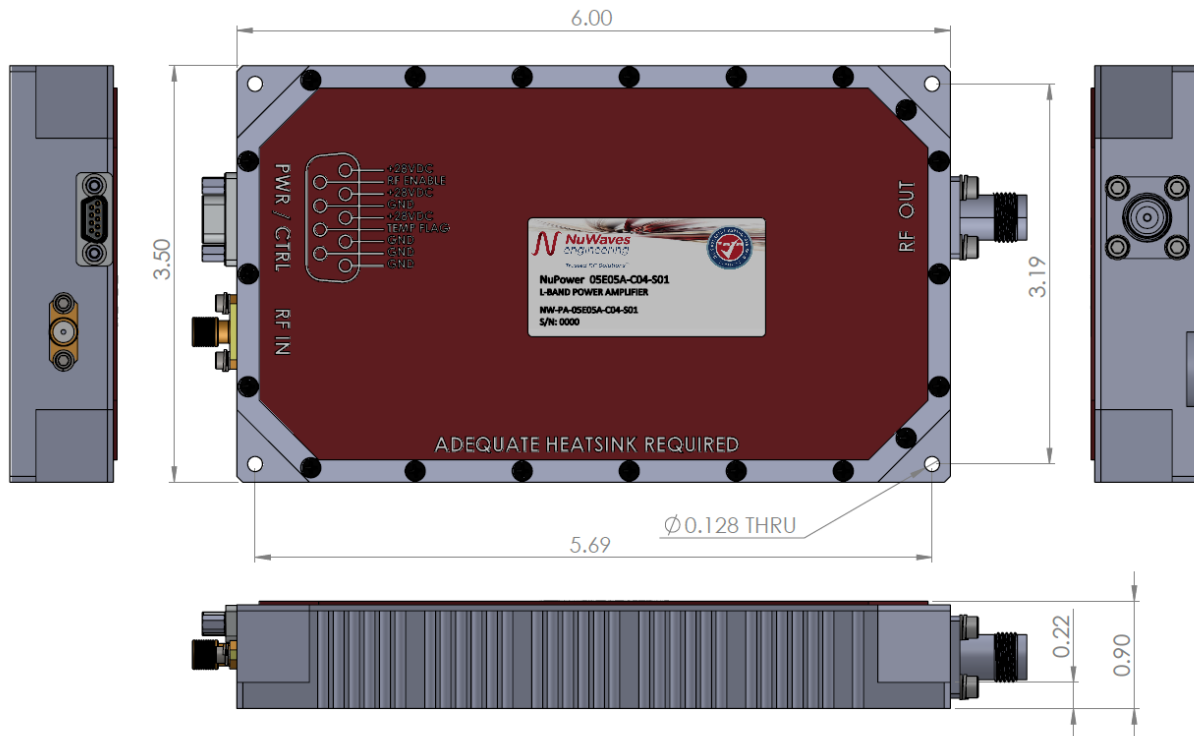


Figure 2: NuPower 05E05A-C04-S01 Mechanical Outline

Table 3: NuPower 05E05A-C04-S01 Mechanical Specifications

Parameter	Specification
RF Input Connector	SMA (female)
RF Output Connector	TNC (female)
Control / Power Interface Connector	9 Pin Micro-D (socket)
Dimensions (L x W x H)	6.0" x 3.5" x 0.9"
Weight	TBD

2.3 HEAT SINKING

The NuPower 05E05A-C04-S01 is offered as a stand-alone module or with optional accessories, which includes a 28 VDC fan-cooled heatsink and requisite power cable.

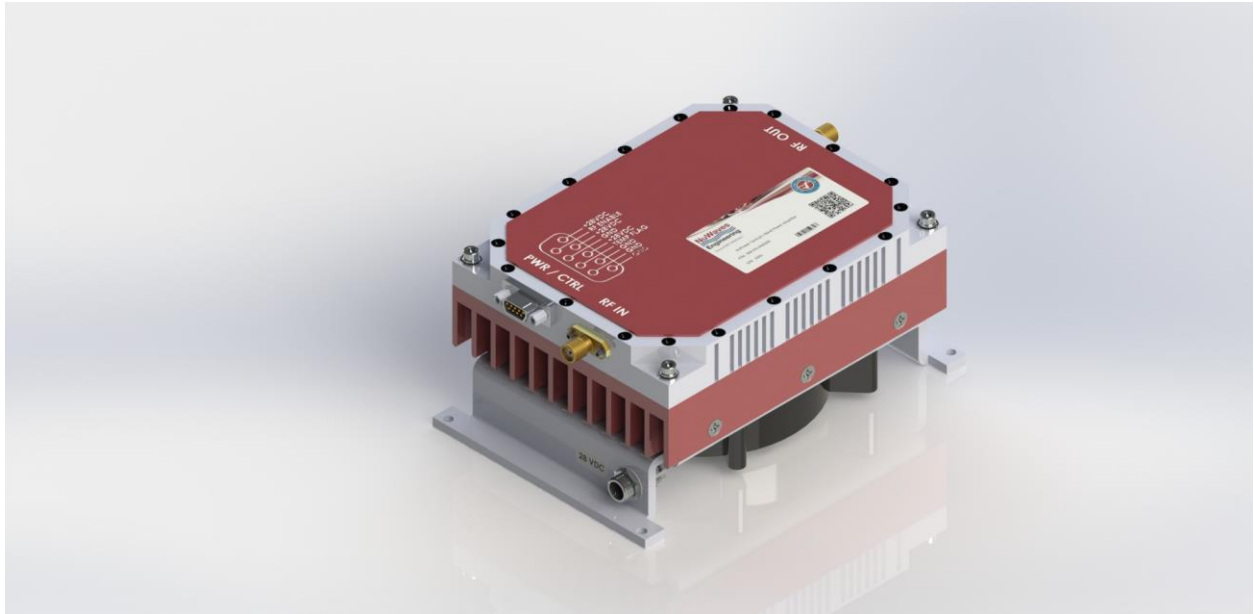


Figure 3: The NuPower PA accessories offers “out-of-the-box” operation for the user. The 28 VDC fan-cooled heatsink is shown with the NuPower 05E05A mounted (05E05A-C04-S01 not shown).



Caution: The use of external heat-sinking is required especially for those applications requiring high duty cycle operation (e.g. continuous wave) or for extended on-time testing. Operation without a proper heat sink under these conditions will cause permanent damage to the product and will void the product warranty.

The maximum operating temperature is 85° C (baseplate).

3 SETUP AND OPERATION

This section provides specific details for proper operation of the NuPower 05E05A-C04-S01 module. Following these guidelines will prevent damage to the power amplifier or external equipment.

3.1 POWER SUPPLY REQUIREMENTS

To operate the NuPower 05E05A-C04-S01, ensure that the power supply has adequate overhead to source the current demand of the RF power amplifier. The power supply source must provide a typical voltage of +28 VDC with greater than 5 amps capability.

3.2 CONNECTING A PROPER LOAD TO THE ANTENNA TERMINAL

To prevent damage to the PA, the antenna terminal must be terminated into a 50 Ω load. Examples of a proper load include:

- Directly connecting to an antenna specified for the frequency range (2294.75 ± 1 MHz).
- Connecting to a proper antenna through a 50 Ω transmission line or coaxial cable. Avoid using damaged cables or corroded connectors while attaching the unit to an antenna.
- Terminating the antenna terminal into a 50 Ω power attenuator with minimum 20 dB attenuation.
- Connecting to a load capable of dissipating the RF power from the PA module. Loads capable of handling 75 Watts (min) are recommended.

3.3 POWERING-UP THE NUPOWER 05E05A-C04-S01

The NuPower 05E05A-C04-S01 must be terminated to a proper load before power is applied. Refer to Section 3.2 for the specifications of the proper load. After the PA is properly terminated, the interface cable can be connected to the unit and power can be applied. The PA is now ready for operation.

3.4 TRANSMIT TURN-ON TIME



Caution: Do not apply transmit data until the PA module is at full power. This will prevent loss of data at the beginning of a message.

The NuPower 05E05A-C04-S01 is at full power approximately $<2 \mu\text{s}$ after the RF Enable line goes low (ground). Therefore, transmit data can be applied to the input after $2 \mu\text{s}$ without loss of data.

3.5 RF OUTPUT POWER VS. SUPPLY VOLTAGE

The NuPower 05E05A-C04-S01 was designed for +28 VDC operation.

4 HARDWARE INTERFACE

- The RF Input connector is SMA (female).
- The RF Output connector is SMA (female).
- The pin-out definitions for the 9 pin Micro-D socket connector are provided in Table 4. In a typical installation, the PA module is mated to a host controller board via a cable harness.



The RF Out SMA connector is the antenna connection. This connection should always be loaded into 50 Ω , otherwise the PA could be damaged.

4.1 INTERFACE CABLE HARNESS

The cable harness that connects the host controller to the 9 pin Micro-D connector of the NuPower 05E05A-C04-S01 is made up of 9 wires.

Table 4: NuPower 05E05A-C04-S01 Interface Pin-Out Definitions

Pin No.	Pin Name	I/O	Description
3, 4, 5	V Supply	I	Primary Power (+28 VDC)
1, 2, 6, 8	GND	I	Signal and Power Ground
7	Temp Flag	O	Over-temp Indicator (Low = temperature fault)
9	RF Enable	I	Transmit Control

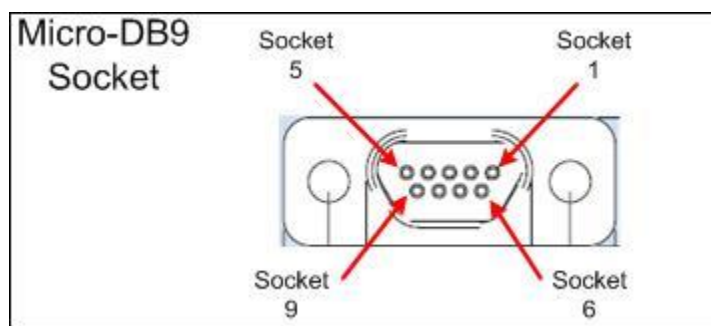


Figure 4: Micro-D Socket Locations

4.2 DC POWER

The nominal supply voltage for the NuPower 05E05A-C04-S01 is +28 VDC; the acceptable supply voltage range is +27 to +32 VDC.

4.3 GROUND

The signal and power grounds are tied together in the PA module.

4.4 RF ENABLE

This signal is the logic control input that designates whether the unit is in transmit or standby mode. The RF Enable line is pulled high internally placing the PA module in *standby* mode. If the pin is left floating (i.e. not connected), the unit will default to *standby* mode.

Grounding the pin (i.e. a voltage below +0.2 VDC) places the unit in *transmit* mode. The user can either connect the RF Enable line to pins, 1, 2, 6 & 8 on the CTRL/PWR interface connector, or an open drain logic line capable of sinking 500 μ A to place the unit in *transmit* mode.

4.5 TEMP FLAG

This signal is an output to indicate an over-temperature condition in the NuPower 05E05A-C04-S01. A logic high (+5 VDC) indicates normal operation, while a logic low (0 VDC) indicates an over-temperature condition. The NuPower 05E05A-C04-S01 incorporates internal logic circuitry that turns off the DC bias to the RF transistors.

The temperature threshold is typically 85°C, calibrated to the baseplate. During a fault condition, drain bias to internal amplifiers are removed, forcing the unit to cool. When the unit cools to approximately 70°C, all functionality is automatically restored.




Caution: The amplifier should be shut down and allowed to cool off when the over-temperature flag is set low to avoid damage to the module.

5 PRODUCT DISPOSAL – END-OF-LIFE

Safety is a guiding principle of NuWaves RF Solutions. We ensure safe production and operation of our products, as well as end-of-life disposal. Improper disposal can adversely affect the environment, wildlife and human health. Please follow these guidelines when disposing of a NuWaves product:

- Do not remove the cover or any hardware
- Do not remove components from the circuit card assembly
- Do not incinerate
- Do not crush or shred
- Do not dispose of as unsorted municipal waste
- Do not export e-waste outside of the original destination country for recycling
- Utilize an e-Steward or ISO14001 certified e-waste recycler
- Consider export controls during recycler selection
- If a NuWaves product is incorporated into a larger system or sub-system, ensure that these guidelines are followed at system end-of-life

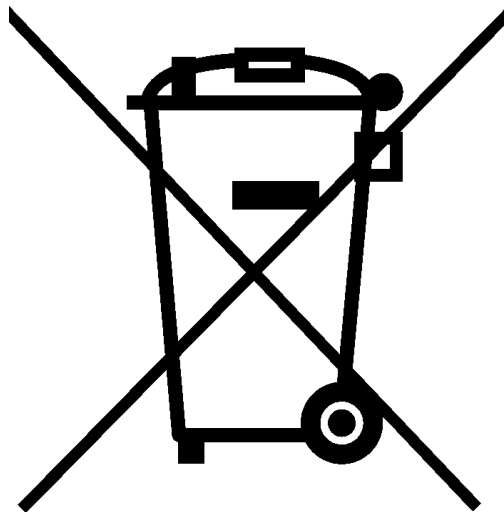

6 GETTING HELP - APPLICATIONS ENGINEERING

NuWaves RF Solutions offers technical support for basic configuration help and troubleshooting, Monday through Friday, 8 a.m. to 5 p.m. Eastern Time.

Technical Assistance, Application Engineering and Sales:

Phone: (513) 360-0800

Email: support@nuwaves.com

NuWaves Home Page: <https://www.nuwaves.com/>

Product Warranty:

<https://nuwaves.com/rf-and-microwave-product-solutions/support/>

6.1 GENERAL INFORMATION

Copyright © 2006 – 2025 NuWaves Ltd. All rights reserved. The information contained in this user manual is copyright protected. NuWaves reserves the right to make periodic modifications and product improvements to the NuPower product line and the associated documentation.